



Before use

How to use  
the phone

How to use the  
phone book

How to use  
mail

How to use  
the camera

How to use  
EZweb

How to use the  
infrared data  
exchange feature

Inputting  
text

Troubleshooting

Other features

# Basic Manual/A1402S

# Welcome

Thank you for buying the A1402S.

Before using your A1402S, be sure to read the A1402S Basic Manual (PDF manual) to ensure correct use of your A1402S. After you have finished reading this manual, store this PDF manual and the printed manuals in a safe place so you can retrieve them whenever you need them.

If you lose any of these manuals, contact our service representative.

## Printed manuals for A1402S (Japanese)

The A1402S comes with the Basic Manual and the Manual.

This Basic Manual and the Manual can be downloaded also from the au website.

au website: <http://www.au.kddi.com/>

### A1402S Basic Manual

Equivalent to this PDF manual.



### A1402S Manual

English version is not available.



In some of the displays used for descriptions in this manual, the icon display area at the top of the display and the soft key option display area at the bottom of the display may be omitted. Also, the typeface and shape of fonts used in displays may differ from those used in actual displays or may be omitted.

# Etiquette

## Cellphone etiquette

- Cellphones emit weak radio waves at all times even if you just turn the power on.
- Enjoy and safely use your cellphone without forgetting those around you.

### ● Some places forbid the use of cellphones.

- Do not use cellphones while you are driving. Doing so is dangerous and forbidden by law.
- Radio waves may interfere with airplane operation. Be sure to turn your cellphone off before you board airplanes.




### ● Radio waves from cellphones may adversely influence medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may be using pacemakers. Turn your cellphone off in such places.
- Abide by the instructions of hospitals and other medical institutions where it is forbidden to use or carry cellphones.



### ● Consider where to use your cellphone and be careful of how loudly you talk.

- Do not make calls from cinemas, theaters, museums, libraries and other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being inconvenienced by the incoming ring.

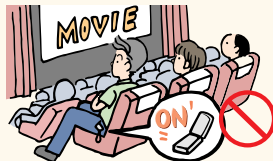

- Use your cellphone in places where you do not prevent others from passing through.
- Move to areas where you do not cause others inconvenience on trains or in hotel lobbies.
- Take care not to talk too loudly during conversations.



- Get other people's permission before you start taking photos with the cellphone's camera.




# Basics of the cellphone

## What A1402S offers

### Mail

You can send mail to other cellphones or PCs.

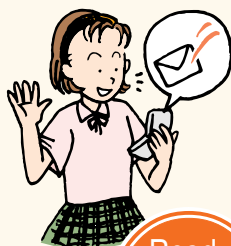

Read from page **34**

### Phone calls

Your cellphone is full of handy functions like a phone book, call list, and manner mode.



Read from page **18**

### EZweb (Internet)


You can view news, or download incoming melodies or wallpaper.




Read from page **64**

### Infrared data exchange

You can send and receive data, like phone book entries and profiles, to and from other A1402Ss.

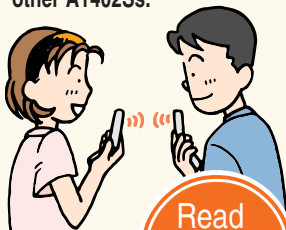

Read from page **72**

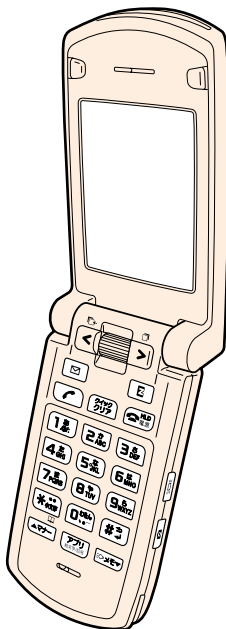

### Camera


You can easily take photos and send them by e-mail.




Read from page **54**

## Manner mode, record message, and keypad lock

### Manner mode – For turning sound off

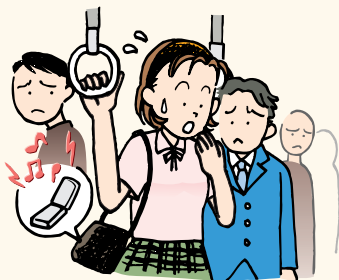

You can use the manner mode to turn incoming rings and other tones off to prevent others from being inconvenienced.


Hold down  for at least one second in the idle display.

See  
page **25**

### Record message – When you cannot answer a phone call



 You can play answer messages and record messages from other parties when you cannot answer a phone call.




Hold down  for at least one second in the idle display.

See  
page **26**

### Keypad lock – For preventing keypad misoperation



You can lock the keypad to prevent keypad misoperation, for example, when carrying your cellphone with the power turned on. This can prevent mistaken calls even if a small child plays with your cellphone.


Hold down  for at least one second in the idle display. To unlock the keypad, hold down  for at least one second in the idle display. You can lock or unlock the keypad by pressing  (shutter key) for at least one second with the main unit folded in when the main display is in the idle display.

## Check the power, radio waves, and battery!

Usually, keep the cellphone's power on.



To make or receive calls, turn the power on.


Hold down  for at least one second.

See  
page 11

You cannot talk if you are not receiving "radio waves."



It is sometimes difficult to receive radio waves in some places even in service areas.


 indicates the reception state.

See  
page 11

Pay attention to the remaining "battery" power.



Sometimes the cellphone does not function properly if the remaining battery power is low.

 indicates the remaining battery power.

See  
page 11

## Watch out for spam and one-ring calls!

### If you get incoming spam...

You can use the mail filter function to disable reception of just mail you specify or block mail indicated as "未承諾広告※" that contains lots of spam.

#### E-mail

The following mail functions are available for preventing arrival of spam:

- "未承諾広告フィルター": To block spam
- "アドレスフィルター": To filter various addresses

"指定拒否設定": To reject specified mail

"指定受信設定": To receive only specified mail

"なりすまし規制": To block mail from a spammer who pretends to be using a cellphone or PHS




#### C-mail

- Receive filter


See  
page 48

### If you have an incoming call from an unknown number...

Such calls may be an invitation to you to return a call to services with very high charges. (This is a "one-ring call.")

The red icon  is displayed in the Received display when you receive a one-ring call.



Received	Dialled
① Feb, 23 030003XXXX	12:00 
② Feb, 22 030004XXXX	10:00
③ Feb, 22 Carol Adams	9:00
④ Feb, 21 John Smith	22:00

See  
page 21

# Contents

<b>Etiquette</b>	<b>1</b>
Cellphone etiquette .....	1
<b>Basics of the cellphone</b>	<b>2</b>
What A1402S offers .....	2
Manner mode, record message, and keypad lock .....	3
Check the power, radio waves, and battery! .....	4
Watch out for spam and one-ring calls! .....	5
<b>Contents</b>	<b>6</b>
<b>Before use</b>	<b>8</b>
Checking the package .....	8
Names of parts .....	9
Charging the battery pack .....	10
Turning the power on .....	11
Turning the power off .....	11
Before using the English display .....	12
Learning the basics .....	12
Viewing the display .....	15
Initial settings for e-mail and EZweb .....	16
Confirming your cellphone number/e-mail address .....	17
<b>How to use the phone</b>	<b>18</b>
Making a call .....	18
Receiving a call .....	19
Redialing the number you called (Dialed) .....	20
Redialing the number you received (Received) .....	20
Filtering one-ring calls .....	21
Changing the volume and tone of the incoming ring .....	22
Changing the volume during a call .....	24
Setting the manner mode .....	25
Recording a message when you cannot answer a call .....	26
Playing back recorded messages .....	27
<b>How to use the phone book</b>	<b>28</b>
Saving new data .....	28
Editing saved data .....	30
Making a call from the phone book .....	32
Saving a received call .....	33
<b>How to use mail</b>	<b>34</b>
Using e-mail .....	34




Changing your e-mail address .....	35
Creating and sending e-mail .....	38
Opening a received e-mail .....	41
Replying to a received e-mail .....	44
Opening a received e-mail with a photo or movie attached .....	47
Filtering spam .....	48
Using C-mail .....	49
Creating and sending C-mail .....	50
Opening a received C-mail .....	52
<b>How to use the camera</b> .....	<b>54</b>
What you can do with this camera .....	54
How to hold the camera .....	55
Taking photos .....	56
Recording movies .....	58
Viewing photos you have taken .....	60
Viewing movies you have recorded .....	61
Attaching a photo or movie to e-mail .....	62
Photo-mail .....	63
<b>How to use EZweb</b> .....	<b>64</b>
EZweb (Internet) .....	64
Viewing information sites .....	65
Saving your favorite sites .....	67
Viewing a site saved to the Favorite list .....	68
Confirming your call costs .....	69
Downloading an incoming melody .....	70
<b>How to use the infrared data exchange feature</b> .....	<b>72</b>
Using the infrared data exchange feature .....	72
Using the infrared data exchange feature to send data .....	74
Using the infrared data exchange feature to receive data .....	75
<b>Inputting text</b> .....	<b>76</b>
Changing the character mode .....	76
Inputting text .....	77
<b>Troubleshooting</b> .....	<b>80</b>
<b>Other features</b> .....	<b>81</b>
<b>Index</b> .....	<b>82</b>

# Before use


## Checking the package

The package contains the main unit and accessories.


- Main unit

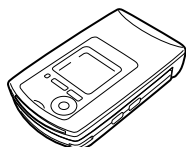


- Battery pack (inside the main unit)

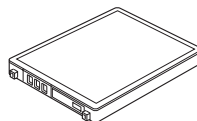


- Sony Ericsson AC adaptor 02

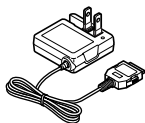

- Desktop holder

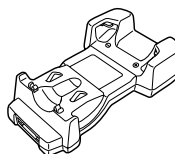

- Style-Up™ Panel (1 piece)

 

- Detachable Macro Lens, Petit Buckle



※ Attach the Petit Buckle to the Detachable Macro Lens so you do not lose it.

- Basic Manual (Japanese)




- Manual (Japanese)




- Warranty (Japanese)
- Safety Precautions (Japanese)
- Introduction to EZ application (BREW™) (Japanese)

# Names of parts

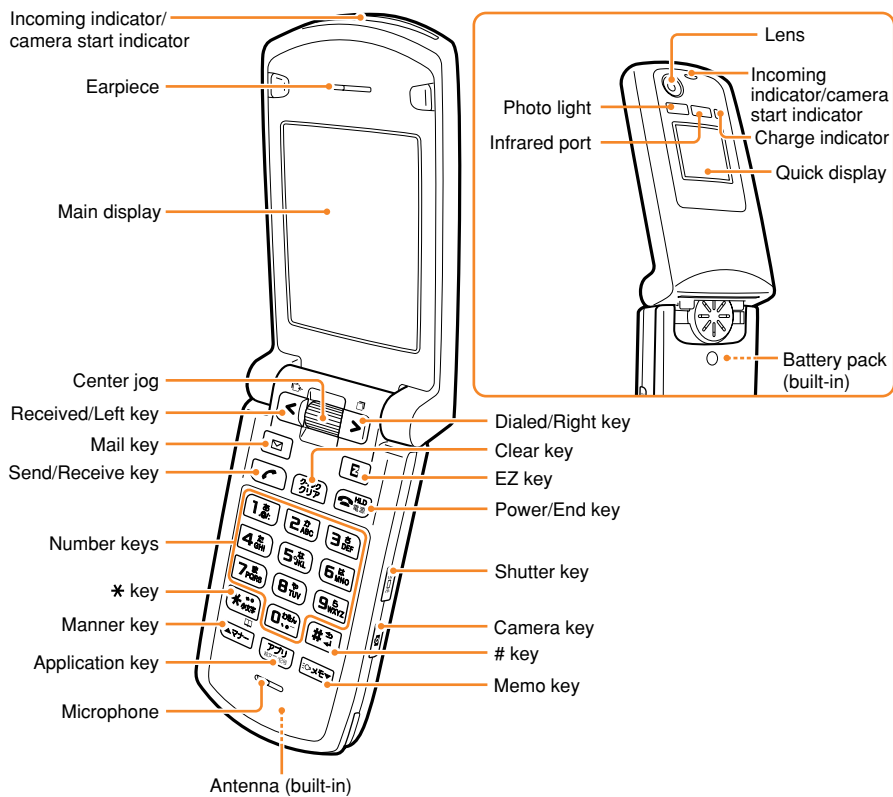

## Charging the battery pack

Before you use your cellphone, charge the battery pack (built-in).

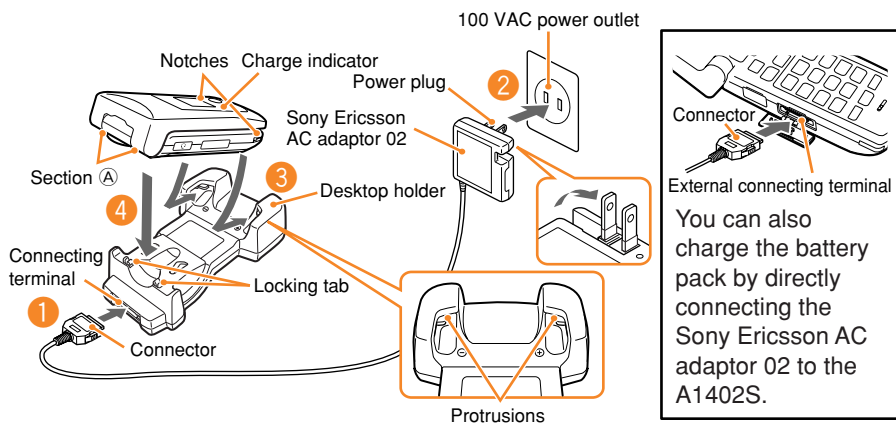

- The charge indicator lights red: The battery pack is being charged.
- The charge indicator turns off: Charging is finished.

1

Connect the Sony Ericsson AC adaptor 02 to the desktop holder.

2

Fold out the power plug of the Sony Ericsson AC adaptor 02, and plug it into a 100 VAC power outlet.

3

Align the notches of the A1402S, with the battery pack attached, to the protrusions of the desktop holder.

4

Insert the A1402S into the locking tab of the desktop holder until it clicks into place.



When removing the A1402S, hold the desktop holder firmly and lift section A on the A1402S.

## Turning the power on

The idle display appears when you turn the A1402S on.





You can operate the A1402S functions, e.g. phone and mail, from the idle display. When you have finished an operation, the display returns to the idle display.

- 1** Hold down  for at least one second.








⇒ When the power is turned on, the idle display appears.

Check the remaining battery power.


			
Fully charged	Medium	Low	Fully discharged

- Charge the battery pack when the power is low.

Check the reception state.

				
Strong	Medium	Weak	Very weak	Out of service area


- You cannot receive or make calls if "圏外" (Out of service area) is displayed.
- Sometimes you cannot receive or make calls if "📶" (Very weak) is displayed.

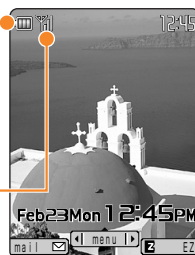


(idle display)

## Turning the power off



 



- 1** Hold down  for at least two seconds.



 To receive calls, leave the power on.






## Before using the English display


- 1 Press  (メニュー) in the idle display, and use  and  to select  (設定) → "画面設定."
- 2 In the 画面設定 display, use  and  to select "Set Language" → "English."

## Learning the basics

### Key operation


Start with how to use  and .

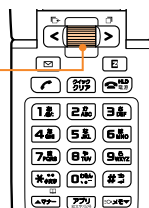


	Press the center jog.
	Turn the center jog up or down.



Soft key functions appear at the bottom of the display.

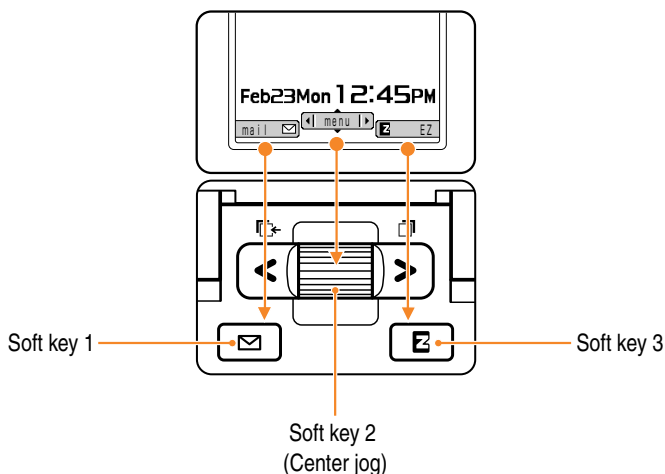You can use the displayed function by pressing one of the soft keys.



-  If you are unsure of an operation or you have made a mistake, return to the previous display by pressing , or return to the idle display by pressing .

## Default settings

Chg lockcode (change lockcode)	1234	Font size	Ordinary font: Large font
Caller ID	ON		EZweb font: Small font E-mail font: Large font

: Selects or confirms each item

: Opens the phone book and moves the cursor up or down

: Opens the Received display and moves the cursor to the left

: Opens the E-mail menu/C-mail menu

: Makes or receives a call

: Deletes characters and cancels operations

: Inputs phone numbers or characters

: Sets or cancels the manner mode

: Opens the Dialed display and moves the cursor to the right

: Accesses EZweb (Internet)

: Turns the power on/off and ends a call

: Takes photos or records movies

: Operates the camera

: Sets or cancels record message

: Starts the EZ application (BREW™)

 
## How to view the Index menu

You can operate the Index menu by using and . Each A1402S function can be called up from the Index menu.

**1** Press (menu) in the idle display.



Press the center jog with the cellphone turned on.


⇒ The Index menu appears.




## Learning the basics (continued)

 2

Turn  to select the desired Index menu, and press  (select).





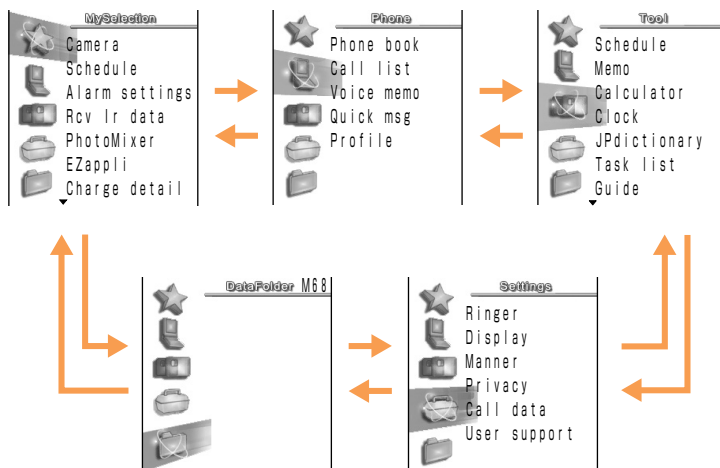


⇒ You can set each item in the Index menu you have selected.



 If you have made a mistake, press . You can cancel the operation or return to the previous display.

The Index menu contains the following functions.

 (MySelection)	You can save any combination of menu items to suit your preferences.
 (Phone)	This menu allows you to use the phone book, call list or voice memo when making calls.
 (Tool)	This menu provides you with a schedule, memo, calculator and other handy features for making the most of your A1402S.
 (Settings)	This menu allows you to set Ringer, Display, and other settings.
 (DataFolder)	This menu allows you to save various data by category for later use.


 Other than the above, various functions are available in the Index menu.




## Viewing the display

You can check arrival of mail, function settings and other information by icons (pictures that represent functions or states). Remembering the main icons comes in handy during operation.

### Main icons

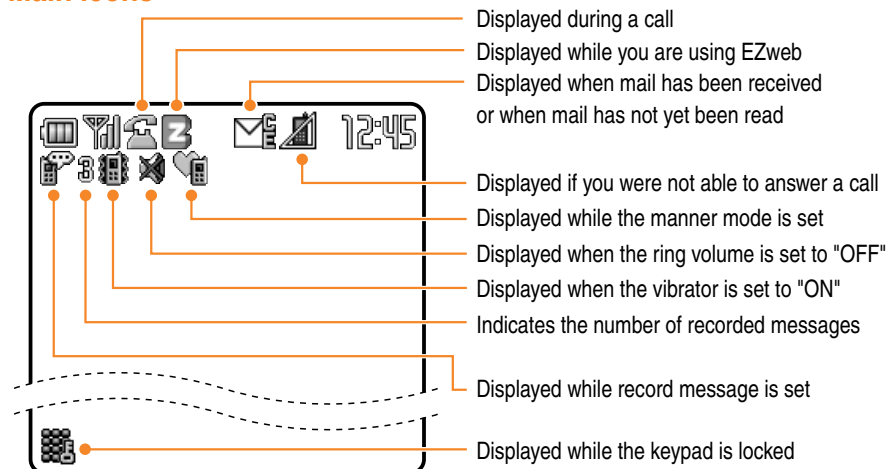

### How to view the quick display

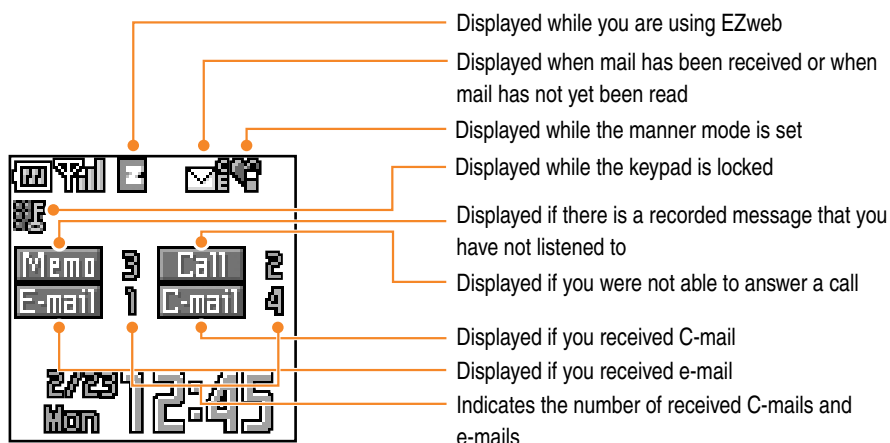

## Initial settings for e-mail and EZweb

You need to subscribe to the EZweb (Internet) service to use the e-mail and EZweb (Internet) service. Contact an au Customer Service Center or an au shop if you did not subscribe to the service at the time of purchase.

Be sure to do initial settings before using the e-mail and EZweb services.

Initial settings automatically determine your e-mail address.

To change that e-mail address to your preferred address, see page 35.


Skip this section if you are not going to use either e-mail or EZweb.

1

Press  (mail),  (EZ) or

アプリ  
短文字化図


in the idle display.

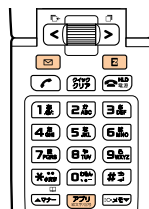

Format EZweb  
Press OK,  
please wait

2

 Press  (ok).



Initializing subscriber  
account.  
Please be patient...



Wait a short while until the display on the right appears.  
The initial settings are finished when the display on the right appears.

Welcome to EZweb.  
Your e-mail address is:  
△△△@ezweb.ne.jp  
-Hint-

3


Press  (ok).

⇒ If you started the initial settings by pressing  (mail), the E-mail menu appears.

If you started the initial settings by pressing  (EZ), the EZ menu appears.



Start by 

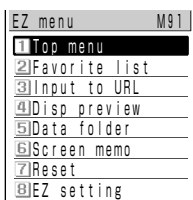

Start by 




Start by 




## Confirming your cellphone number/e-mail address

 You can confirm your cellphone number and e-mail address.



- 1 Press  (menu) in the idle display.



⇒ The Index menu appears.



 
- 2 Turn  to select  (Phone), and press  (select).

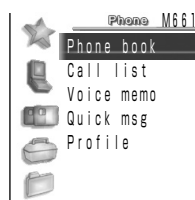


⇒ The Phone menu appears.



 
- 3 Turn  to select "Profile," and press  (select).

⇒ The profile display appears so that you can confirm your cellphone number and e-mail address.



 You can also confirm your cellphone number and e-mail address by pressing  (menu) and  in the idle display.

 Your e-mail address is automatically determined when you make the initial settings. You can also change to an e-mail address you like (see page 35).

# How to use the phone

Learn how to do basic phone operations.

## Making a call


Dial a phone number to make a call.

1

Press  to  to input the other party's phone number.

**To call a regular phone**

Input the phone number starting with the area code.

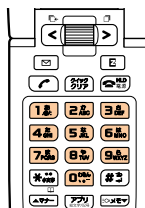

030001XXXX



**To call a cellphone, carphone or PHS**

Input all 11 of the digits in the phone number.

**To notify the other party of your cellphone number**

Input "186" before your cellphone number.

**Not to notify the other party of your cellphone number**

Input "184" before your cellphone number.

2

 
Press .



Wait a short while until you hear the tone.



When you have finished the call, press .



Hello




## Receiving a call

 
When you have an incoming call, the incoming ring sounds and the incoming indicator flashes.

When you set the manner mode, settings for the manner mode take effect (see page 25).

1

Press  or  (call) to answer the call.



When you have finished the call, press .

Duration

10



## Display when you have received a call

When a phone number is displayed:

The other party has set to notify Caller ID. If the other party's name is already saved in the phone book, that person's name is also displayed.

When "User unset" is displayed:

The other party has set not to notify Caller ID.

When "Payphone" is displayed:

You have received a call from a payphone.

When "Not support" is displayed:

You have received a call from a party that is not able to notify you of their phone number.

Susan Jones


0900001XXXX



Incoming call  
User unset



## Display if you could not answer a call

If you could not answer a call, you are notified that you had a call on the display. If you press  (confm), you can confirm the phone number of the other party that called you and redial that party (see page 20).



## Redialing the number you called (Dialed)

 
You can call up a phone number you have previously dialed, and redial that number.

- 1 Press  in the idle display.



⇒ The Dialed display appears.




The Dialed display can hold the last 30 phone numbers you called in sequence from the most recent.



Received	Dialed
1 Feb, 23 11:05	John Smith
2 Feb, 22 10:22	030004XXXX
3 Feb, 21 9:35	Carol Adams
4 Feb, 20 20:15	Kate Dickens

- 2 Turn  to select the phone number you want to call, and press .

 ⇒ The call is connected to the phone number you selected.



## Redialing the number you received (Received)

 
You can redial parties that have called you in the past and that have notified you of their phone numbers.

- 1 Press  in the idle display.

⇒ The Received display appears.



The Received display can hold the last 30 phone numbers you received in sequence from the most recent.



Received	Dialed
1 Feb, 23 11:05	Carol Adams
2 Feb, 22 10:00	030004XXXX
3 Feb, 21 10:32	John Smith
4 Feb, 20 21:30	Alan Nelson



### Icons



 
(blue): Indicates that you were not able to answer an incoming call.



(red): Indicates that the other party discontinued the call within three seconds.

- 2 Turn  to select the phone number you want to call, and press .

⇒ The call is connected to the phone number you selected.





## Filtering one-ring calls


### What is a one-ring call?

This is a call you receive from an unknown party. They ring only once and leave their phone number in your Received display to make you call back to that number and connect you to a service with very high charges.

### One-ring call warning icon

When you have received a one-ring call (call time less than three seconds), the red icon  is displayed in the Received display. Be careful when you call back to a number you do not recognize.

Received	Dialed
① Feb, 23 11:00 030001XXXX	
② Feb, 22 10:00 030004XXXX	
③ Feb, 21 9:00 Carol Adams	
④ Feb, 20 22:00 John Smith	

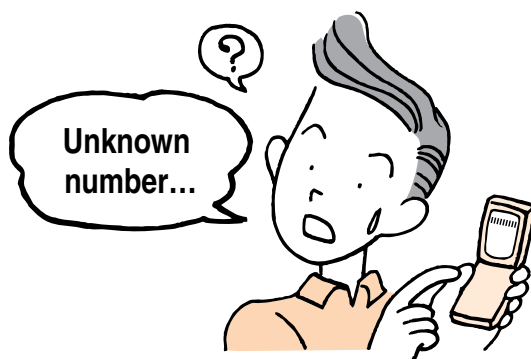

## Changing the volume and tone of the incoming ring


 
You can adjust the volume and change the tone (incoming ring) that sounds when you have an incoming call.




Note, however, that if the manner mode is set, the volume of the incoming ring cannot be changed.

You can also adjust the volume by turning  during an incoming call.


**1** Press  (menu) in the idle display.

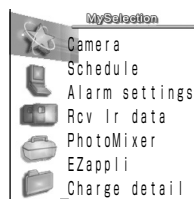

⇒ The Index menu appears.




 
**2** Turn  to select  (Settings), and press  (select).

⇒ The Settings menu appears.





**3** Turn  to select "Ringer," and press  (select).

 ⇒ The Ringer display appears.

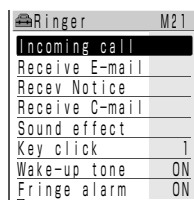



**4** Turn  to select "Incoming call," and press  (select).

  ⇒ The Incoming call display appears.

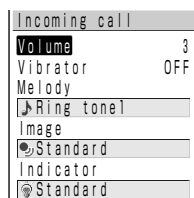



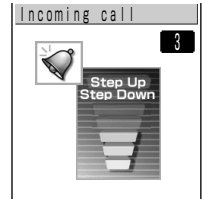


- 5** Turn  to select "Volume," and press  (select).



⇒ The ring volume adjustment display for incoming calls appears, and the incoming ring sounds.

 - 6** Turn  to adjust the volume, and press  (ok).





"OFF": The incoming ring does not sound.

"1" to "5": The incoming ring sounds at the level you set.



"Step Down": The volume of the incoming ring decreases.


 
"Step Up": The volume of the incoming ring increases.

 "Step Down" and "Step Up" can be selected by turning  up beyond "5."

⇒ The volume of the incoming ring for incoming calls is set.


 To end settings, jump to step 9.

- 7** Turn  to select "Melody," and press  (select).

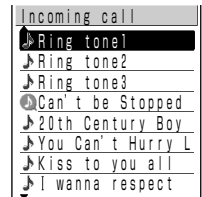


⇒ The ring tone selection display for incoming calls appears.

 If you press  (listen), the incoming ring you selected plays back.


If you press  (■) while the incoming ring is being played, the incoming ring stops playing.

 - 8** Turn  to select an incoming ring, and press  (save).



⇒ The incoming ring is set.

 - 9** Press  (back).





## Changing the volume during a call

You can adjust the volume of the other party's voice to any of five levels during a call.

### 1 Turn during a call.


: Increases the volume.

 : Decreases the volume.

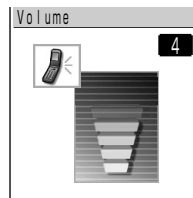

### 2 Press (ok).

 


⇒ The volume during a call is set.




## Setting the manner mode

When you set the manner mode, the incoming ring no longer sounds when you have an incoming call. In this mode, the A1402S vibrates to notify you of incoming calls.

### 1 Hold down for at least one second in the idle display.

 




⇒ The manner mode is set, and ,  and  appear in the display.


At the same time, record message is set, and  appears in the display.



How to use the phone

### To cancel the manner mode


Hold down  for at least one second in the idle display. , ,  and  disappear from the display.

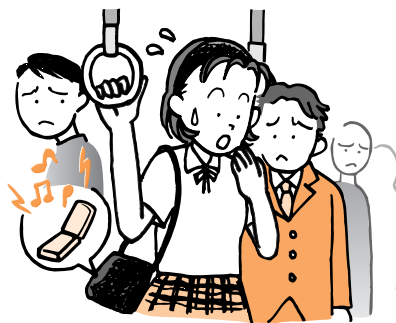


## Recording a message when you cannot answer a call


When you cannot answer a call, you can set answer messages to play automatically after a preset amount of time and record a maximum of three messages up to 20 seconds long from other parties (record message).

- 1 Hold down  for at least one second in the idle display.

⇒ Record message is set, and  appears in the display.

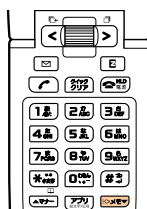

### To cancel record message

 Hold down  for at least one second in the idle display.  disappears from the display.




When you turn the power off or you are in a place where the radio waves are weak, use Voice Mail.

## Playing back recorded messages

You can play back recorded messages (record message).

### When a message is recorded

⇒ A message appears in the idle display, then  1 (number of recorded messages) also appears in the idle display.





Missed call 1

Feb 23 Mon 12:45PM

1

Press  in the idle display.


⇒ The Voice memo display appears.

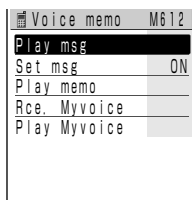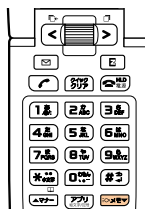



2

 Turn  to select "Play msg," and press  (select).



⇒ The Play record msg display appears.




3

Turn  to select the recorded message to play back, and press  (play).

 ⇒ The recorded message plays back.

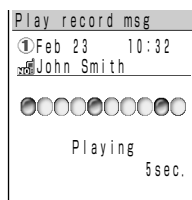

You can delete recorded messages by pressing  (delete) while the recorded message is playing back.


# How to use the phone book

 You can save phone numbers and e-mail addresses of parties that you frequently call or e-mail in the phone book and easily access those numbers and addresses to make calls or create e-mail.

## Saving new data



- 1 Turn  (menu) in the idle display.




⇒ The phone book list appears.




 
- 2 Press  (new).

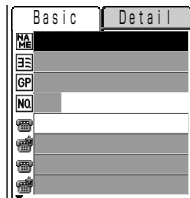
⇒ The edit phone book display appears.



- 3 Turn  to select  (name), and press  (select).

 ⇒ The Name display appears.

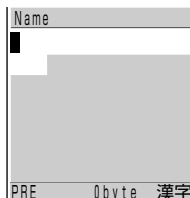





- 4 Input the name, and press  (ok).

⇒ The edit phone book display reappears.



 (JP reading) is automatically inputted.

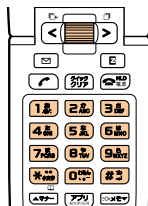 For details on how to input text, see page 76.



 
- 5 Turn  to select  (Phone no.), and press  (select).

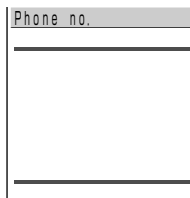

⇒ The Phone no. display appears.




6

Input the phone number, and press  (ok).

⇒ The edit phone book display reappears.

" Public" is automatically inputted at  (phone type).

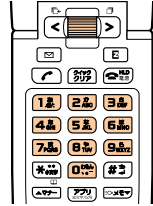




If the phone number to save is a regular phone, start by inputting the area code. If the phone number is a cellphone or PHS, input all of the 11 digits in the phone number.

 


To end saving the phone book, jump to step 9.


7

Turn  to select  (Mail address), and press  (select).



⇒ The Mail address display appears.





8

Input the e-mail address, and press  (ok).

⇒ The edit phone book display reappears.

" Public" is automatically inputted at  (e-mail address type).

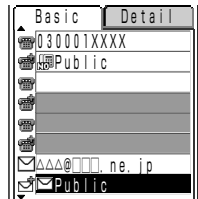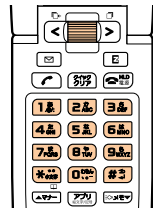

For details on how to input e-mail addresses, see page 77.

 


You can input the section (domain) (see page 37) following @ in the e-mail address such as "@ezweb.ne.jp" using phrases (see page 79).

9

Press  (cmplt).

⇒ The information is saved in the phone book.



The entry is automatically saved to the smallest available memory number from 000 to 499.




 
You can also save other items such as groups, incoming rings, postal addresses, and birthdays.

## Editing saved data

You can edit the information saved in the phone book.

Example: To edit phone numbers

 
- 1 Turn  (menu) in the idle display to display the phone book list.





あかさたなはまや
相原太一
青木一郎
赤坂花子
阿部
井田
伊藤
宇野
江口

To switch from the "あ" to "A"  
display lines.


Press  or .



たなはまやらわA
Alan Nelson
Brian Miller
Carol Adams
Jane Moore
John Smith
Kate Dickens
Nancy Brand
Ron Edwards

- 2 Turn  to select the address to edit, and press  (select).

 
⇒ The information saved for the address that you selected appears.



Basic	Detail
01	Nancy Brand
03	NancyBrand
NO	000
00	030001XXXX
00	030002XXXX
00	0900003XXXX
00	△△△△△@□□□□□. ne.
	jp



 
- 3 Press  (edit).


⇒ The edit phone book display appears.




Basic	Detail
01	Nancy Brand
03	NancyBrand
GP	00
NO	000
00	030001XXXX
00	Public
00	030002XXXX
00	Home



 



- 4** Turn  to select the item you want to edit (in this case, ) and press  (select).




Phone no.
030001XXXX

 See steps 3 and 4 on page 28 to edit names, and see steps 7 and 8 on page 29 to edit e-mail addresses.

  - 5** Edit the information, and press  (ok).


 Press  to delete a saved character.  
To delete all characters, hold down  for at least one second.

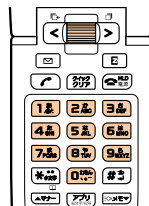

Basic	Detail
NAME Nancy Brand	
NAME NancyBrand	
GP 0	
NO 000	
030004XXXX	
NAME Public	
030002XXXX	
Home	

- 6** Press  (cmplt).

 
⇒ The edited data is saved in the phone book.




たなほまやらふA
Alan Nelson
Brian Miller
Carol Adams
Jane Moore
John Smith
Kate Dickens
Nancy Brand
Ron Edwards

## Making a call from the phone book

 You can call up phone numbers saved in the phone book to make calls. You can also send e-mail from the phone book.


- 1** Turn  (menu) in the idle display to display the phone book list.





あかさたなはまやわ
相原太一
青木一郎
赤坂花子
阿部
井田
伊藤
宇野
江口

 
To switch from the "あ" to "A"

Press  or .



たなはまやわA
Alan Nelson
Brian Miller
Carol Adams
Jane Moore
John Smith
Kate Dickens
Nancy Brand
Ron Edwards

 - 2** Turn  to select the other party to call, and press  (select).



Basic	Detail
 Nancy Brand	
 NancyBrand	
 NO 000	
 NO 030001XXXX	
 NO 030002XXXX	
 NO 030003XXXX	
 NO 030004XXXX	
 NO 030005XXXX	
 NO 030006XXXX	
 NO 030007XXXX	
 NO 030008XXXX	
 NO 030009XXXX	
 NO 030010XXXX	
 NO 030011XXXX	
 NO 030012XXXX	
 NO 030013XXXX	
 NO 030014XXXX	
 NO 030015XXXX	
 NO 030016XXXX	
 NO 030017XXXX	
 NO 030018XXXX	
 NO 030019XXXX	
 NO 030020XXXX	


## Saving a received call

 You can save the phone number of received calls to the phone book.



Example: To save from the Received display

- 1** Press  in the idle display.

⇒ The Received display appears.




Received	Dialed
1 Feb, 23 11:05 030004XXXX	
2 Feb, 22 10:22 Susan Jones	
3 Feb, 21 9:35 Carol Adams	
4 Feb, 20 22:00 John Smith	



- 2** Turn  to select the phone number to save in the phone book, and press  (save).

 "New": Creates and saves a new address.


"Add": Adds and saves newly added information to an address already in the phone book.






Select way to save to phone book
New
Add

 - 3** Turn  to select "New," and press  (select).

⇒ The edit phone book display appears. The phone number you selected is automatically inputted.



 For details on how to save information in the phone book, see steps 3 to 9 on pages 28 and 29.

 To save information in the phone book from the Dialed display, press  in the idle display to display the Dialed display, and do steps 2 and 3.

# How to use mail

## Using e-mail

You need to subscribe to the EZweb (Internet) service to use the e-mail service.



Contact an au Customer Service Center or an au shop if you did not subscribe to the service at the time of purchase.

Be sure to do initial settings before using the e-mail and EZweb services.

If you have not done initial settings yet, see page 16.

The e-mail service allows you to exchange mail with PCs or cellphones that support e-mail using Internet e-mail addresses. Besides being able to send mail comprising up to 5,000 double byte characters, you can also send photos and movies.

An e-mail is sent to an e-mail address.  
(Example)  $\Delta\Delta\Delta@□□□.ne.jp$

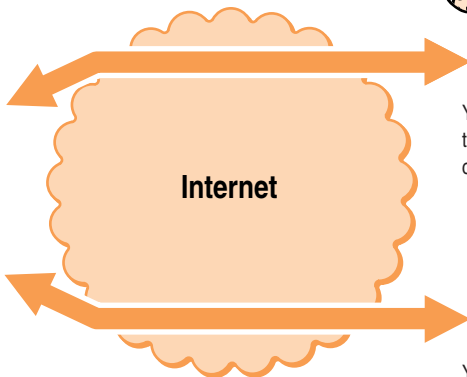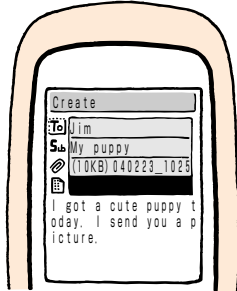

You can also send e-mail to au and other cellphones.



You can also send e-mail to PCs.

## How to use mail

- 
- A diagram of a control panel. It features a central button with a vertical ribbed texture and two arrowheads pointing left and right. Above this central button are two small square buttons, each with a different icon. Below the central button are two larger square buttons: the left one has an envelope icon, and the right one has a document icon.

```
E-mail menu M71
Create new
Inbox
Outbox
Check new mail
Data folder
Settings
```

- 
- A diagram showing a car seat headrest with a neck support pillow. The pillow is positioned behind the headrest, and the car seat is shown in a side profile view.

E-mail settings	
Recv/Disp	
Send/Create	
Mail block	OFF
Etc. setting	
Check setting	
Memory status	

- 
- The diagram shows a control panel with a central button featuring a striped pattern and two arrows pointing left and right. Above this central button are two small square buttons with symbols: a left-pointing arrow and a right-pointing arrow. Below the central button are two larger square buttons: the left one contains an envelope icon, and the right one contains a square icon with a stylized 'Z' or 'E' shape.

Yes  
NO

- 

その他の設定  
 1 エキスポート先の変更  
 2 自動転送先  
 3 メールフィルター  
 4 31. NET接続の設定  
 5 その他の設定の確認

-----  
 31. NET接続の設定  
 (X11)の追加、変更、解除

■終了



- 
- The diagram shows a control panel with a central button labeled 'E' and four surrounding buttons labeled 'A', 'B', 'C', and 'D'. The buttons are arranged in a cross pattern around the central button 'E'.


 
お客様の暗証番号を入力してください。

暗証番号を1日に3回間違えると、翌日まで設定操作はできません。




[送信](#) [リセット](#)


## Changing your e-mail address (continued)

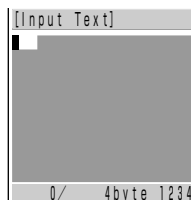

- 6** Turn  to select the input field, and press  (Edit).







### Security code

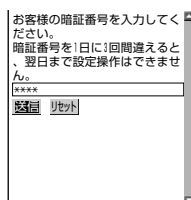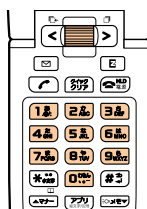

-  Be sure to remember your security code since it is required for this operation. The security code is the four-digit number you wrote on the application form.
-  Note that no setting operation is allowed on the following day if you enter the wrong security code three times in one day.
-  On the first day of your EZweb contract, authentication using the security code is not required.


 
- 7** Input your security code, and press  (ok).



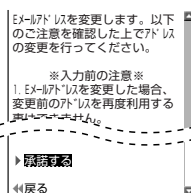


 
- 8** Turn  to select "送信," and press  (Select).

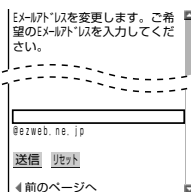

- 9** Turn  to select "承諾する," and press  (Select).





 - 10** Turn  to select the input field, and press  (Edit).

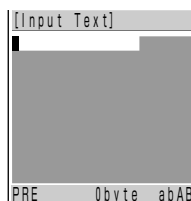

11

Input the section preceding @,  
and press  (ok).

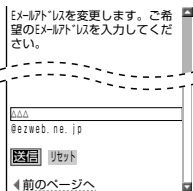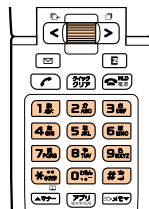

e-mail address

Example: △△△@ezweb.ne.jp



Input this section.


 
Domain



For details on how to input e-mail addresses, see page 77.

12

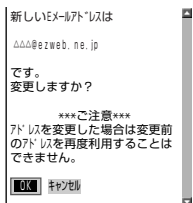

Turn  to select "送信," and  
press  (Select).





### When an e-mail address cannot be used

 - The e-mail address that you inputted is already being used.  
Input a different e-mail address.
- Unsupported characters have been inputted. Use characters that are supported  
(See page 77).

13

Turn  to select "OK," and  
press  (Select).




Pressing  (OK) returns the display to the E-mail settings display.



# Creating and sending e-mail

 You can create and send new e-mail.



**1** Press  (mail) in the idle display.

⇒ The E-mail menu appears.







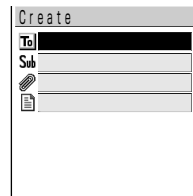 


**2** Turn  to select "Create new," and press  (select).

⇒ The Create display appears.





## Icons

 -  (Address): Input the e-mail address of the party you want to send the e-mail to.
-  (Subject): Input the subject of the e-mail.
-  (Attachment): Attach data to e-mail.
-  (Main text): Input the main text of the e-mail.


**3** Turn  to select  (address), and press  (select).

⇒ The input method selection display appears.

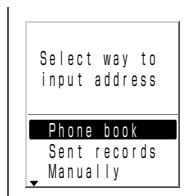



## Input methods


- "Phone book": Inputs an e-mail address saved in the phone book.
- "Sent records": Inputs an e-mail address from e-mails that have been sent so far.
- "Manually": Input an e-mail address manually.
- "Profile": Inputs your own e-mail address.


 You can send e-mail to up to five destinations at a time. There are three types of destinations: To, Cc and Bcc.

 
**4** Turn  to select "Manually," and press  (select).

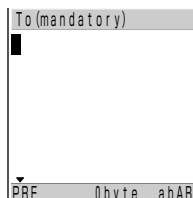







- 5** Input the e-mail address, and press  (ok).

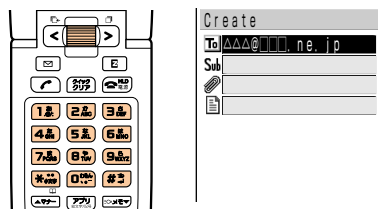
 For details on how to input e-mail addresses, see page 77.




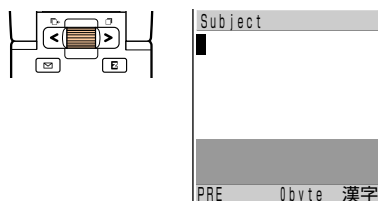


- 6** Turn  to select Sub (subject), and press  (select).





- 7** Input the subject, and press  (ok).

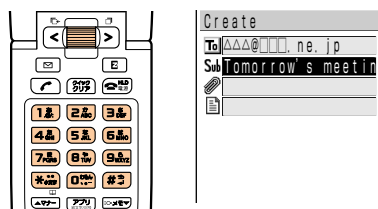
 For details on how to input text, see page 76.




- 8** Turn  to select  (main text), and press  (select).

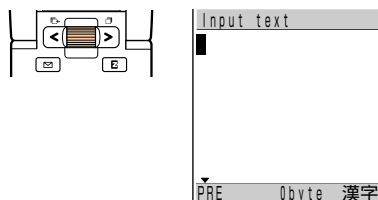

- 9** Input the main text, and press  (ok).

 For details on how to input text, see page 76.


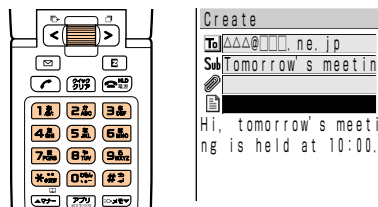


## Creating and sending e-mail (continued)

10

Press **E** (send).

 ⇒ The Select sending display appears.

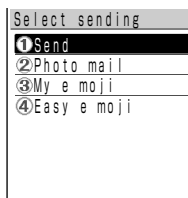

### Send methods

"Send": Sends e-mail to the inputted address.

"Photo mail": Sends images taken or recorded with the camera after converting them so that they can be viewed on a non-au cellphone or an au cellphone that does not support the movie mail service.

"My e moji": Sends au e mojis (icons) in a way that they can be viewed on a non-au cellphone as they are.

"Easy e moji": Sends au e mojis after converting them into non-au e mojis.





After you select "Photo mail," "My e moji" or "Easy e moji," the inputted e-mail address is automatically changed.

 


"My e moji" and "Easy e moji" are charged services and require separate application.

11

Turn  to select "Send," and press  (select).

⇒ The e-mail is sent.




When sending finishes, the display on the right appears, and the sent e-mail is saved in the Outbox.



## Opening a received e-mail

When you receive an e-mail, "E-mail △" (△ : number of received mails) is displayed in the idle display. Received e-mails are saved in the Inbox.

### When you receive an e-mail

⇒ A message appears in the idle display, then  also appears in the idle display.

E-mail 1

Feb23Mon 12:45PM

 
1

Press  (confm).

⇒ The Inbox display appears.



#### Icon

: Indicates the folder containing new mail.















Inbox	Unread
1	M folder 1
2	Folder 2
3	Folder 3
4	Folder 4
5	Folder 5
6	Folder 6
7	Folder 7

 2


Turn  to select the folder containing new mail, and press  (select).

     
⇒ The display for the selected folder appears.




Mainfidr New	1/020
001	    .ne
002	 Jane Moore
003	 Kate Dicken
004	 Jane Moore
005	 John Smith
006	 Kate Dicken
007	 John Smith
008	 John Smith

#### Icons



: Indicates "read mail" that has already been read.

 
: Indicates "unread mail" that has not yet been read.

: Indicates that a photo is attached to the mail.

 Normally, e-mail is saved in the M folder.

## Opening a received e-mail (continued)

- 3** Turn  to select the new mail, and press  (viewer).



⇒ The content of the mail appears.

### How to view received mail

Indicates read mail.

Indicates the mail's sender. (A name is displayed if it is saved in the phone book.)

00:00  
02/23 12:45  
From: ΔΔΔ@ΓΓΓ.ne.jp  
Sub: Send you picture  
I send you a picture  
I took in the park  
yesterday.  
ΔΔΔ (28KB) 040223\_1244~  
01.jpg

Indicates that a photo is attached to the mail.

Indicates the date and time when the mail was received.

Indicates the mail's subject.

Displays the mail's main text.



For details on viewing attached images, see page 47.



## To open an e-mail in the Inbox

 
- 1 Press  (mail) in the idle display.

⇒ The E-mail menu appears.



### Icon




: Indicates "unread mail" that has not yet been read. The number on the right is the number of unread mails.





E-mail menu M71	
Create new	
Inbox	1
Outbox	
Check new mail	
Data folder	
Settings	

 - 2 Turn  to select "Inbox," and press  (select).

⇒ The Inbox display appears.




Inbox	Unread
M folder	1
1 Folder1	
2 Folder2	
3 Folder3	
4 Folder4	
5 Folder5	
6 Folder6	
7 Folder7	

- 3 Turn  to select the folder containing the mail you want to read, and press  (select).



 ⇒ The display for the selected folder appears.




Normally, e-mail is saved in the M folder.



Mainfldr New	1/020
001	▲▲▲@□□.ne
002	Jane Moore
003	Kate Dicken
004	Jane Moore
005	John Smith
006	Kate Dicken
007	John Smith
008	John Smith

 - 4 Turn  to select the mail you want to read, and press  (viewer).




001	▲▲▲@□□.ne
02/23	12:45
From	▲▲▲@□□.ne.jp
Sub	Send you picture
I send you a picture I took in the park yesterday.	
▲▲ (28KB)	040223_1244~
01.jpg	


# Replying to a received e-mail

 1



Press  (mail) in the idle display.

⇒ The E-mail menu appears.





E-mail menu M71	
Create new	
Inbox	
Outbox	
Check new mail	
Data folder	
Settings	

2



 Turn  to select "Inbox," and press  (select).

⇒ The Inbox display appears.

 



 
 
 
 
 


Inbox Unread	
	M folder 1
1	Folder1
2	Folder2
3	Folder3
4	Folder4
5	Folder5
6	Folder6
7	Folder7


3

Turn  to select the folder containing the mail you want to reply to, and press  (select).



⇒ The display for the selected folder appears.




Mainfldr New 1/020	
001	 Kate Dicken
002	 Jane Moore
003	 Kate Dicken
004	 Jane Moore
005	 John Smith
006	 Kate Dicken
007	 John Smith
008	 John Smith



 Normally, e-mail is saved in the M folder.


 
4

 Turn  to select the mail you want to reply to, and press  (viewer).





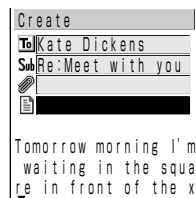

001	
02/23 13:16	
From	Kate Dickens
Sub	Meet with you
Tomorrow morning I'm waiting in the square in front of the Δ station.	


 
- 5** Turn  to select **From** (sender), and press  (reply).






⇒ The Create display appears.


-  **Sub**(subject) is prefixed with "Re:," and the main text of the e-mail is quoted.

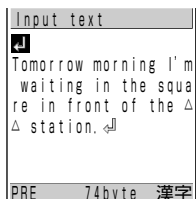- 6** Turn  to select  (main text), and press  (select).




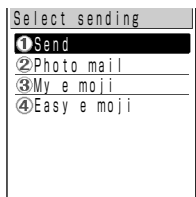
 
- 7** Input the main text, and press  (ok).

-  For details on how to input text, see page 76.
-  To edit **Sub** (subject), see steps 6 and 7 on page 39.

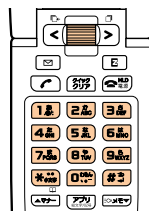



- 8** Press **E** (send).


-  For details on how to send mail, see page 40.



## Replying to a received e-mail (continued)

 9

Turn  to select "Send," and press  (select).



⇒ The e-mail is sent.

Sending  
E-mail



When sending finishes, the display on the right appears, and the sent mail is saved in the Outbox.

Send complete



## Opening a received e-mail with a photo or movie attached

Example: To view a photo and play back a movie attached to a received e-mail

1

See steps 1 to 3 in "Opening a received e-mail" (pages 41 and 42) to view the content of a mail.

⇒ The photo appears.



Turn to select a photo, and press (view) to view the entire photo in the display.

 


Some photos do not appear automatically depending on their size. If a photo does not appear, go to step 2.




2

Turn to select a file name, and press (recv).



⇒ The movie is received. Press (play) to view the movie.

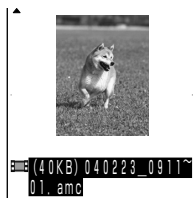

Receiving  
attached data








## Filtering spam

### Setting the mail filter

The mail filter function allows you to block spam or set the A1402S to receive only specified mail. You can also block mail indicated as "未承諾広告※" that contains lots of spam.

Follow the procedure below to use the mail filter function.

- ① Press  (mail) in the idle display, and use  and  to select "Settings" → "Etc. setting."
- ② Use  and  to select "Yes" → "3 メールフィルター," and input your security code.

The mail filter function contains the following functions.

#### 未承諾広告フィルター

This filter allows you to block mail containing "未承諾広告※" in its subject.

#### アドレスフィルター

"全受信": All e-mail is received.

"指定受信設定":

- "一括指定先" This specifies Internet and cellphone domains, and receives only e-mails that arrive from those domains.
- "個別指定" This specifies the section preceding @, the domain or the entire e-mail address, and receives only those specified e-mails.

"指定拒否設定": This specifies the section preceding @, the domain or the entire e-mail address, and blocks only those specified e-mails.

"なりすまし規制": This filters e-mail from a spammer who pretends to be using a cellphone or a PHS when you set "全受信" and "規制する" simultaneously.



By changing your e-mail address, you can prevent spam from being received.


To change your e-mail address, see page 35.




C-mail also provides a function to block spam.

## Using C-mail

C-mail is a service that allows you to exchange mail with other au cellphones that support C-mail using cellphone numbers. You can send mail comprising up to 50 double byte characters by C-mail.

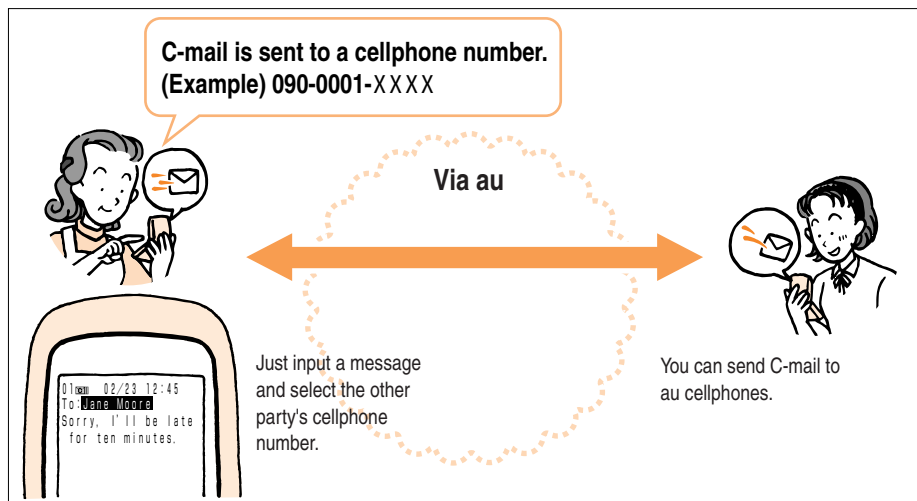



 You can use C-mail without having to make any special applications in the Metropolitan area or the Chubu District. Users contracted in other areas must apply separately to use the C-mail service.



## Creating and sending C-mail

 You can create and send new C-mail.



- 1 Hold down  (mail) for at least one second in the idle display.

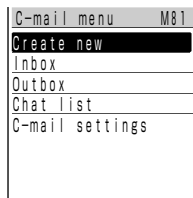
⇒ The C-mail menu appears.



 
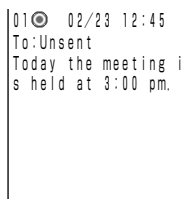
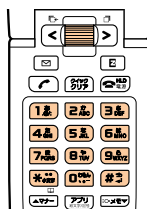
- 2 Turn  to select "Create new," and press  (select).

⇒ The Input text display appears.

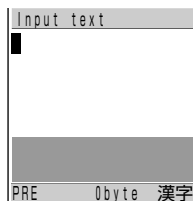


 
- 3 Input the main text, and press  (ok).

 For details on how to input text, see page 76.



- 4 Press  (send).

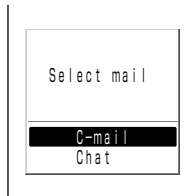

⇒ The send mode selection display appears.





### Send modes

 "C-mail": Sends mail in the regular mode. This mode allows you to exchange mail between cellphones that support C-mail.

"Chat": Sends mail as mail in the chat mode. This mode allows you to exchange mail continuously with the other party.

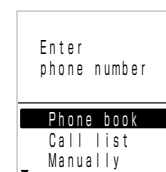

- 5** Turn  to select "C-mail," and press  (select).





⇒ The input method selection display appears.


### Input methods

 
- "Phone book": Inputs a cellphone number saved in the phone book.
- "Call list": Inputs a cellphone number from the Dialed or Received display.
- "Manually": Input a cellphone number manually.
- "Memo": Inputs a cellphone number saved in the memo.

- 6** Turn  to select "Manually," and press  (select).

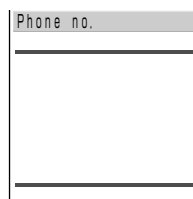


⇒ The Phone no. display appears.

- 7** Input the cellphone number, and press  (send).

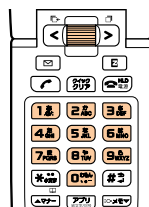


- 8** Press  (select).

 

Sending C-mail  
(Normal mode)

⇒ The C-mail is sent.

-  When the mail arrives at the other party, "Sending completed" is displayed, and the sent mail is saved in the Outbox.



## Opening a received C-mail

When you receive a C-mail, "C-mail △" (△ : number of received mails) is displayed in the idle display. Received C-mails are saved in the Inbox.

### When you receive a C-mail

⇒ A message appears in the idle display.

 
C-mail 1

Feb23Mon 12:45PM

1

Press  (confm).

⇒ The content of the mail appears.




001 02/23 12:45  
 Jane Moore  
 Tomorrow the meeting  
 will be held at 3  
 :00 pm. TEL030001XX  
 XX


## To open a C-mail in the Inbox

 - 1 Hold down  (mail) for at least one second in the idle display.



⇒ The C-mail menu appears.

### Icon


: Indicates "unread mail" that has not yet been read. The number on the right is the number of unread mails.









C-mail menu M81	
Create new	
Inbox	1
Outbox	
Chat list	
C-mail settings	

 - 2 Turn  to select "Inbox," and press  (select).

⇒ The Inbox display appears.

    


Inbox	New	1/004
001		02/23 12:45
	Jane Moore	
002		02/22 10:00
	John Smith	
003		02/22 09:32
	Ron Edwards	
004		12/21 10:30
	John Smith	

- 3 Turn  to select the C-mail you want to read, and press  (viewer).

⇒ The content of the mail appears.



001		02/23 12:45
	Jane Moore	
Tomorrow the meeting will be held at 3:00 pm. TEL030001XX		
XX		

# How to use the camera

The camera function on the A1402S allows you to take photos and record movies. You can send photos and movies you have taken attached to e-mail. You can use the infrared data exchange feature to send and receive data with other A1402Ss.

## What you can do with this camera

### 1 You can have fun with photos and movies on the A1402S

You can set photos you have taken as the idle display, or save photos or movies to the phone book or display them when you have an incoming call.




### 2 You can mail photos and movies.

You can send photos and movies attached to e-mail.  
※The VGA format is ideal for using photos on personal computers.




### 3 You can use the infrared data exchange feature

You can send and receive data with other A1402Ss by using the infrared data exchange feature.

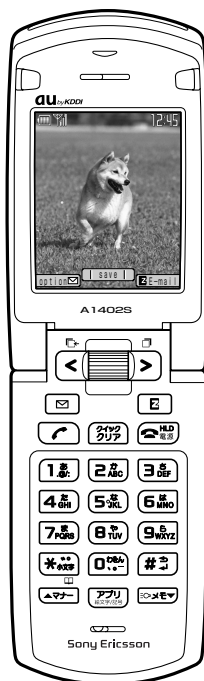




# How to hold the camera

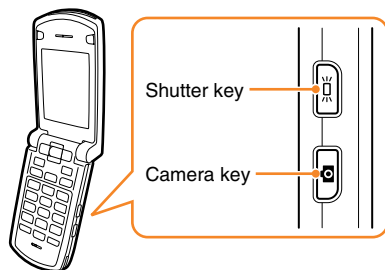


## Taking photos and movies with your cellphone folded out

To take "QVGA" or "QQVGA" photos

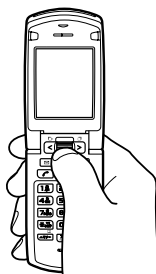


To take movies or "VGA" photos

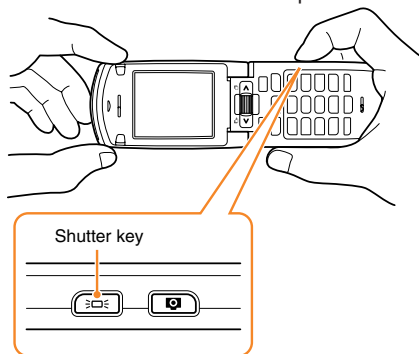


## Taking photos and movies with your cellphone closed (for self-portraits)


To take "QVGA" or "QQVGA" photos

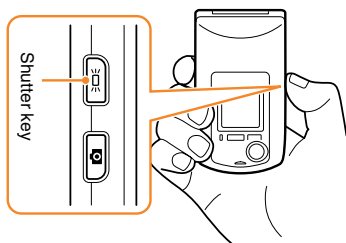


To take movies or "VGA" photos

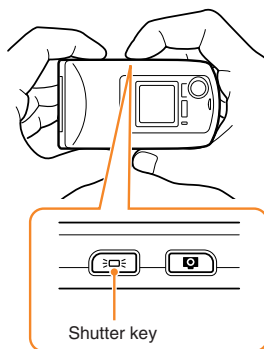


## Taking photos

- 1 Hold down  (camera key) on the side of your cellphone for at least one second in the idle display.

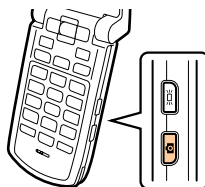



⇒ The photo monitor screen appears.

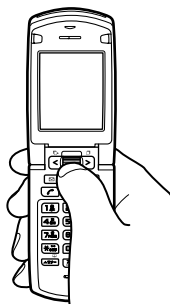
- 2 Display the subject you want to take on the photo monitor screen.



- 3 Press  (shoot).


⇒ You hear the shutter sound, and the photo you have taken is displayed (preview screen).

 -  You can also take photos by pressing  (shutter key) on the side of your cellphone.



4

 Press  (save).



⇒ "Saved in data folder" is displayed, and the display returns to the monitor screen.

Saved in  
data folder



You can also save the photo by pressing the shutter key.



Photos are saved in "Photo folder" in the data folder.

## How to read a photo title in the data folder

Example of a photo title

040223\_1030~02

Date: February 23, 2004

Time: 10:30

Serial number: 2<sup>nd</sup> photo




There are three photo modes: "QVGA," "QQVGA," and "VGA."




## Recording movies

While you are recording a movie, the movie is displayed horizontally (the display returns to normal when you play back the movie). Use the A1402S on its side according to the following procedure.

1

Hold down  (camera key) on the side of your cellphone for at least one second in the idle display



to display the photo monitor screen, and press  (camera key) again.

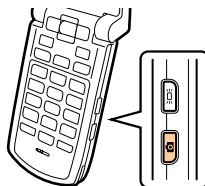


⇒ The movie monitor screen appears.


2



Hold the A1402S with both hands, and display the subject you want to take on the movie monitor screen.

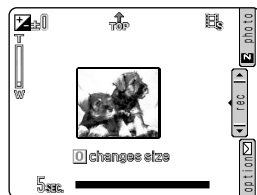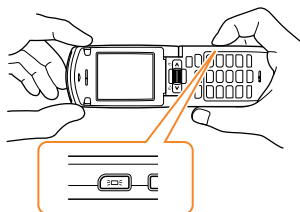

3

Press  (shutter key) on the side of your cellphone.

⇒ You hear the shutter sound, and  flashes when recording starts.

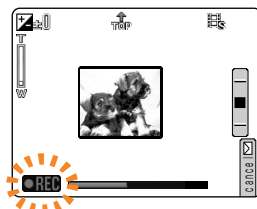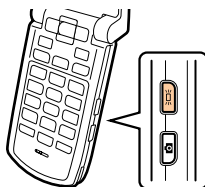

 You can also record images by pressing  (rec).

### To cancel recording


Press  (cancel). Recording is canceled, and the monitor screen reappears.


## To stop recording

Press  (shutter key) or  (  ).

## When you stop recording or the recording time ends


The end tone sounds, and the recorded movie plays back automatically (automatic playback screen).


During automatic playback, you can adjust the volume of the recorded movie by turning .

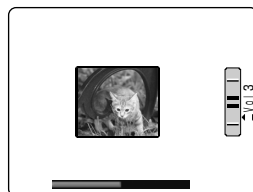

(automatic playback screen)

When automatic playback ends, the initial recorded screen is displayed vertically (preview screen).

-  The default recording time is five seconds. The recording time setting can be changed to up to 60 seconds.

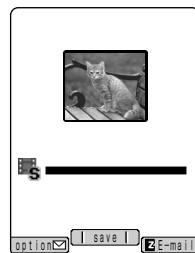


(preview screen)

4

Press  (save).

 ⇒ "Saved in data folder" is displayed, and the display returns to the movie monitor screen.



Saved in  
data folder

-  Movies are saved in "Movie folder" in the data folder.

## How to read a movie title in the data folder

Example of a movie title


S\_040223\_1030~02

Recorded in the S (Mail) mode

Date: February 23, 2004


Time: 10:30

Serial number: 2<sup>nd</sup> movie


-  There are four movie recording modes: "S (mail)," "M (mail)," "S long," and "M long."




## Viewing photos you have taken

You can view photos you have taken.



- 1 Hold down  (camera key) on the side of your cellphone for at least one second in the idle display.

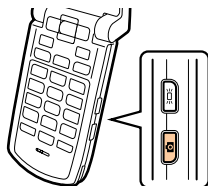

⇒ The photo monitor screen appears.



 
- 2 Press , turn  to select "Photo folder," and press  (select).

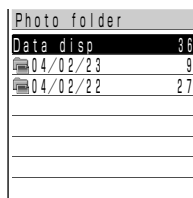

⇒ The Photo folder display appears.



 
- 3 Turn  to select the date folder containing the photo you want to view, and press  (select).



⇒ Three photos in the date folder in "Photo folder" appear starting with the photo taken most recently.



 - 4 Turn  to select the photo you want to view, and press  (view).

⇒ The photo you selected appears.



 You can change the size of the display by pressing  in the monitor screen.

## Viewing movies you have recorded

You can play back movies you have recorded.


1

Hold down 




(camera key) on the side of your cellphone for at least one second in the idle display to display the photo monitor screen, and press

 (camera key) again.


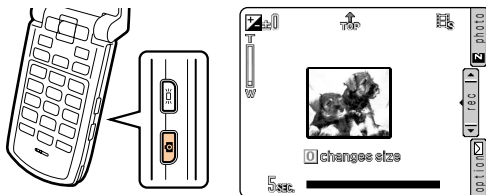
⇒ The movie monitor screen appears.





2

 Press  (option), turn  to select "Movie folder," and press  (select).

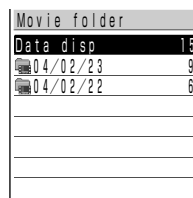
⇒ The Movie folder display appears.





3

 Turn  to select the date folder containing the movie you want to view, and press  (select).


⇒ Three movies in the date folder in "Movie folder" appear starting with the movie recorded most recently.



4

Turn  to select the movie you want to view, and press  (play).

 ⇒ The movie you selected plays back.





## Attaching a photo or movie to e-mail

You can send photos or movies you have taken attached to e-mail.

1

 Press **[E]** (E-mail) in the preview screen immediately after you have taken the image.

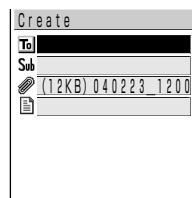



⇒ "Saved in data folder" is displayed, and the Create display appears.



The photo or movie you have taken is automatically attached to an e-mail (attachment). For details on how to create e-mail, see steps 3 to 11 on pages 38 to 40.



"Other phone cannot play size over case happen" may appear. Turn  to select "Attach on," and press  (select).




Photos and movies already saved in the data folder can also be attached to e-mail.



## Photo-mail

You can use "Photo-mail" to automatically convert and send images so that they can be viewed properly on other cellphones even if the other party is not using an au cellphone. To use Photo-mail, you must change the other party's e-mail address to a Photo-mail address.

If you select "Photo-mail" for the automatic address change function (display on the right) when sending e-mail, the other party's e-mail address is automatically changed (as shown below) before sending.

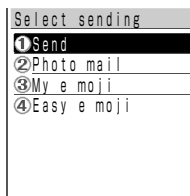

Other party	E-mail address	New address
DoCoMo	△△△@docomo.ne.jp	△△△@d.nepm.jp
Vodafone	△△△@jp-□*.ne.jp	△△△@jp-□*.nepm.jp
	△△△@□*.vodafone.ne.jp	△△△@□*.vodafone.nepm.jp
TU-KA and au phones that do not support Movie mail	△△△@ezweb.ne.jp	△△△@ezweb.nepm.jp

※: □ varies according to the area.

# How to use EZweb

## EZweb (Internet)


You need to subscribe to the EZweb (Internet) service to use the EZweb (Internet) service. Contact an au Customer Service Center or an au shop if you did not subscribe to the service at the time of purchase.

Be sure to do initial settings before using the e-mail and EZweb services.

If you have not done initial settings yet, see page 16.


EZweb is an information service that allows you to enjoy the Internet on your cellphone.

With EZweb, you can obtain incoming melodies, the latest news, and other contents (information) from information sites (web sites that provide information).

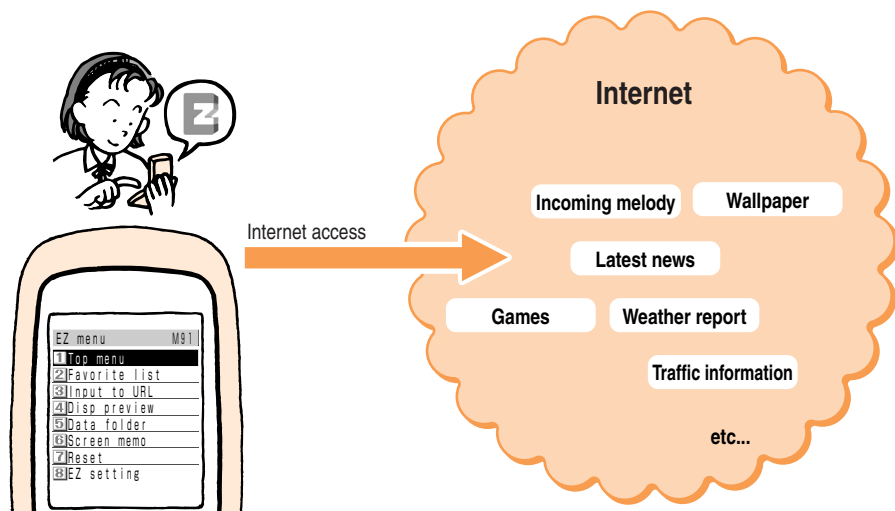

## Viewing information sites

You can access (connect to) EZweb (Internet) from the EZ Top menu. EZweb allows you to access handy, fun information sites (contents).

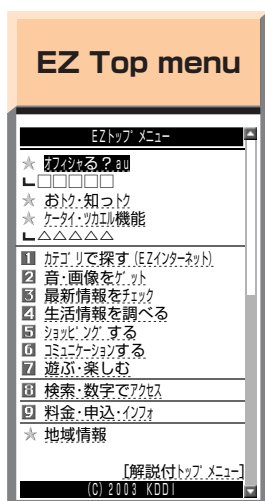

### オフィシャル? au

Information recommended by au such as the latest EZweb information

### おトク・知っく

Sites that offer presents and prizes

### ケータイ・ツカエル機能

Introduction of recommended handy, fun sites accessible by your cellphone

### カテゴリで探す (EZ インターネット)

Allows you to access all official sites by category

### 音・画像をゲット

Sites that allow you to download EZ "着うた™", incoming melodies, idle displays, and other data

### 最新情報をチェック

Portal to news, weather, stock prices, and other sites

### 生活情報を調べる

Portal to lifestyle information that makes your life more convenient

### ショッピングする

Shopping sites with a wide variety of goods

### コミュニケーションする

Portal to greeting mail, bulletin boards, chat and other sites

### 遊ぶ・楽しむ

Provides various entertainment and fun information

### 検索・数字でアクセス

Provides access to sites by allowing you to input keywords or Internet numbers

### 料金・申込・インフォ

Allows you to confirm costs and view au information

### 地域情報

Provides regional information

### 解説付トップメニュー

Provides explanations for the EZ Top menu



The display layout and content are just an example. These are subject to change.


 


Some information sites are subject to additional information costs besides communications costs.

## To display the EZ Top menu



**1** Press **[E]** (EZ) in the idle display.

⇒ The EZ menu appears.

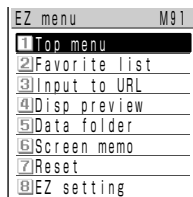

**2** Turn **[Left/Right]** to select "**1 Top menu**," and press **[Enter]** (select).

 ⇒ The EZ トップメニュー display appears.

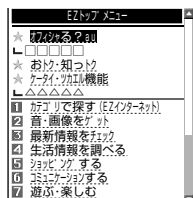

It may take a short while for the display to appear.

## To access information sites (sites that provide contents)

Turn **[Left/Right]** to select the desired information site, and press **[Enter]** (Select).


**[Back]** : Pressing this button returns the display to the previous display. Holding it down for at least one second returns the display to the EZ Top menu.

**[Exit]** : Exits EZweb.

**[Scroll]** : Scrolls the display up and down.

**[Left]** : Returns to the previous display.

**[Right]** : Goes to the next display (available only when a display was previously viewed).

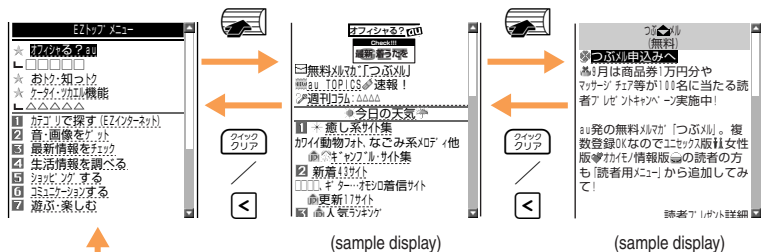

Hold down **[Back]** for at least one second.



## Saving your favorite sites

 You can save up to 100 titles and URLs (site addresses) of information sites that you frequently visit.



1

Display the site you want to save,  
and press **[E]** (Browser Menu).

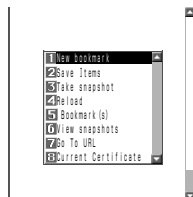
⇒ The Browser Menu appears.






2

 Turn  to select "**1** New bookmark," and press  (Select).

⇒ The display for saving the title and URL appears.

 


3

Turn  down, press  (Save), then press  (OK).

⇒ The currently displayed site is saved to the Favorite list.



 You cannot save some sites to the Favorite list.



## Viewing a site saved to the Favorite list

 
- 1** Press  (EZ) in the idle display.

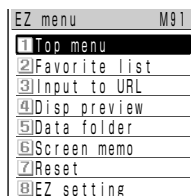

⇒ The EZ menu appears.



 
- 2** Turn  to select "2 Favorite list," and press  (select).

⇒ The Favorite list appears.



- 3** Turn  to select the site you want to view, and press  (Go).

 ⇒ The site you want to view appears.





# Confirming your call costs

From EZweb you can confirm information such as that related to EZweb charged information services you have applied for (including information on goods purchased via the premium EZ payment agent service).

## 1 Press **E** (EZ) in the idle display.


 
⇒ The EZ menu appears.

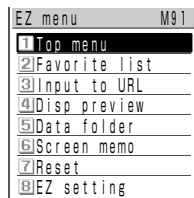

You can also display the 料金照会 display by pressing (menu) in the idle display, then using and to select "MySelection" → "Charge detail" → "Yes."



## 2 Turn to select "1 Top menu," and press (select).

 ⇒ The EZ トップメニュー display appears.

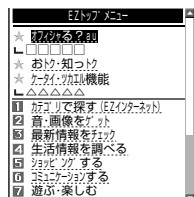

## 3 Turn to select "9 料金・申込・インフォ" and press (Select).


 
⇒ The 料金・申込・インフォ display appears.

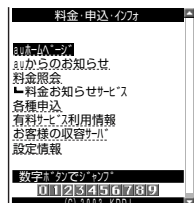

You can confirm and change the list of the charged sites you saved as well as your EZ password and premium EZ password at "有料サービス利用情報."

## 4 Turn to select "料金照会" and press (Select).

 ⇒ The 料金照会 display appears so that you can select the item you want to confirm.

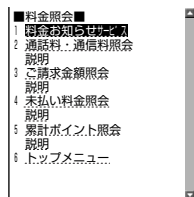

# Downloading an incoming melody


 
You can download an incoming melody and specify it as an incoming ring.

Example: To download an incoming melody and specify it as an incoming ring

1

Press **EZ** (EZ) in the idle display.



⇒ The EZ menu appears.

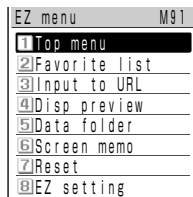

2

Turn **Left Arrow** to select "1 Top menu," and press **Right Arrow** (select).


 
⇒ The EZ トップメニュー display appears.

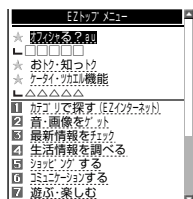

3

Turn **Left Arrow** to select "2 音・画像をゲット," and press **Right Arrow** (Select).


 
⇒ The 音・画像をゲット display appears.

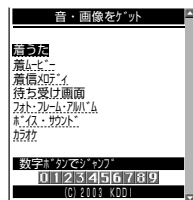

4

Turn **Left Arrow** to select "着信メロディ," and press **Right Arrow** (Select).

 
⇒ The 着信メロディ display appears.

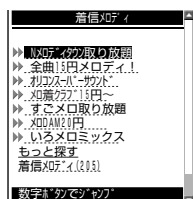


(sample display)



 
- 5** Turn  to select the desired site, and press  (Select).



⇒ Follow the on-screen instructions to select the melody you want to download.



  To use information sites that incur additional information costs, you must input your EZ password. If you are using such services for the first time, set your EZ password. Note down the EZ password that you have set.


- 6** Select a melody to download.



 
⇒ Download the melody by following the on-screen instructions.




 
- 7** When downloading finishes, press  (play) to play back the incoming melody, and press  (save) while the incoming melody is playing.



⇒ The Save to display appears.

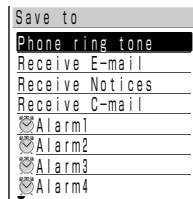

- 8** Turn  to select "Phone ring tone," and press  (select).



⇒ The downloaded incoming melody is specified as an incoming ring.


# How to use the infrared data exchange feature

You can use the infrared data exchange feature of your A1402S to send and receive phone book entries, profile data, data in data folders, and other data to and from other A1402Ss.

## Using the infrared data exchange feature

To send data with the infrared data exchange feature, both the person sending and the person receiving the data need to make preparations.

(We recommend that the person receiving data get ready before the sender sends the data.)

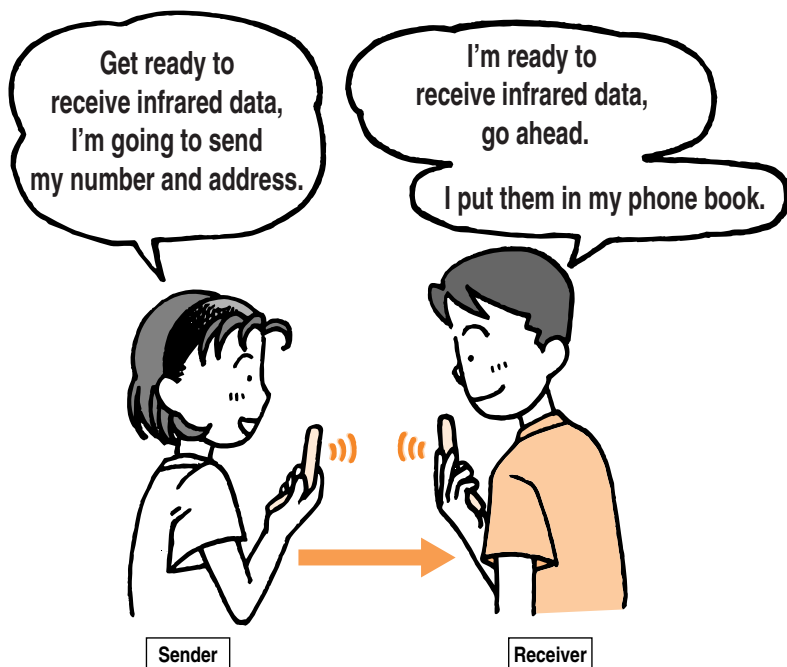


※ For details on sending data, see page 74.

※ For details on receiving data, see page 75.


## Procedure


Use your A1402S within 20 cm of another A1402S. Also, keep your A1402S pointed at the infrared port of the other A1402S and do not move your A1402S until data has finished being sent or received.

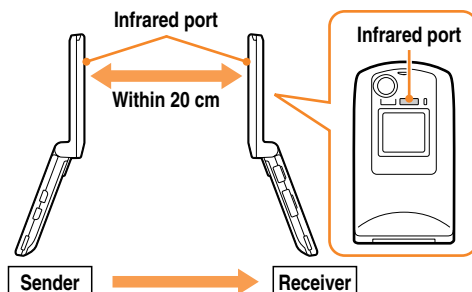

## Data that can be sent and received




- Phone book entries
- Profiles
- Schedules
- Task lists
- Data in data folders


 You cannot send or receive some data from some A1402Ss even if the other A1402S you are communicating with is equipped with the infrared data exchange feature.


 The infrared data exchange feature of the A1402S sometimes does not transmit properly if the A1402S is used in direct sunlight, under fluorescent lighting or near other equipment that emits infrared rays.


# Using the infrared data exchange feature to send data


Example: To send profile data


- 1 Press  (menu) in the idle display, and press  .
- ⇒ The profile display appears.

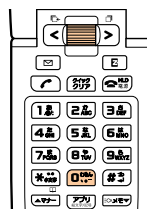


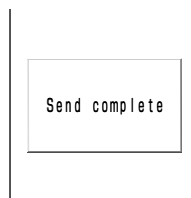
- 2 Press  (option).
- ⇒ The Function menu appears.

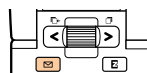

- 3 Turn  to select "send Ir data," and press  (select).
- ⇒ Data is sent through the infrared data exchange feature.

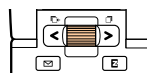

 When sending finishes, the display on the right appears.







 You may be required to input your authentication password.

## Using the infrared data exchange feature to receive data


 
- 1 Press  (menu) in the idle display.



⇒ The Index menu appears.




- 2 Turn  to select  (Tool), and press  (select).

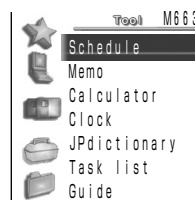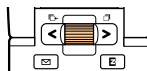⇒ The Tool menu appears.



- 3 Turn  to select "Rcv Ir data," and press  (select).

⇒ Data is received through the infrared data exchange feature.

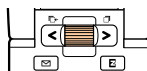

 When receiving finishes, a message is displayed and the data is saved.


 You may be required to input your authentication password.

# Inputting text

Learn how to input text.


## Changing the character mode

Input text using characters from the 11 character modes.

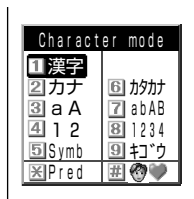


- |                                 |                                 |
|---------------------------------|---------------------------------|
| 1 Kanji/Hiragana mode           | 6 Single byte katakana mode     |
| 2 Double byte katakana mode     | 7 Single byte alphanumeric mode |
| 3 Double byte alphanumeric mode | 8 Single byte number mode       |
| 4 Double byte number mode       | 9 Single byte symbol mode       |
| 5 Double byte symbol mode       | # E moji mode                   |
| * Phrase mode                   |                                 |

 
- 1 Press **E** (mode) in the text input display.



⇒ The Character mode display appears.

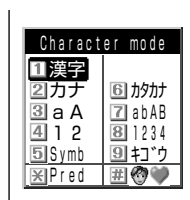

- 2 Turn to select the character mode, and press (select).

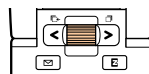


⇒ You can now input text in the selected character mode.



The character mode can also be changed by pressing

**E** (next), **1** , to **9** , **\*** , or **#** in the character mode display.

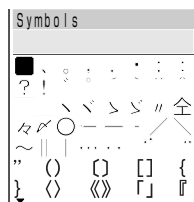

## Inputting text

You can use this feature to input data such as e-mail addresses and e-mail messages. Change the character mode and select alphanumerics such as **3**aA or **7**abAB. For details on how to change the character mode, see page 76.


In the text input display, you can input text by pressing the keys indicated in the following table.

[illegible]

■ Character key assignment table (single byte alphanumerics)

	Number of times to press the key												
Key	1	2	3	4	5	6	7	8	9	10	11	12	13
1 あ @	.	@	/	:	-	_	~	1					
2 カ ABC	a	b	c	A	B	C	2						
3 キ DEF	d	e	f	D	E	F	3						
4 ケ GHI	g	h	i	G	H	I	4						
5 コ JKL	j	k	l	J	K	L	5						
6 ク MNO	m	n	o	M	N	O	6						
7 ケ PQRS	p	q	r	s	P	Q	R	S	7				
8 コ TUV	t	u	v	T	U	V	8						
9 キ WXYZ	w	x	y	z	W	X	Y	Z	9				
0 ぴろ 、。ー	スペース	!	?	-	,	'	;	(	)	"	&	¥	0
* ぽろ 小文字	※	!	?	-	,	'	;	(	)	"	&	¥	

※  is also used to switch between uppercase and lowercase.

 You can input your e-mail address using up to 20 single byte alphanumeric characters in lowercase including "-" (hyphen) and "." (period). Note, however, that "." cannot be used in a row, or at the beginning or end of your e-mail address. Also, your e-mail address cannot be prefixed by "0." Characters and symbols shaded in the table are not allowed before @ of "△△△@ezweb.ne.jp."

## Inputting text (continued)

Example: To input "tomy1" in the mail address

1

**Input the section preceding @.**



t : Press **[8 tlv]** once.

o : Press **[6 mno]** three times and press **[>]** once.

m : Press **[6 mno]** once.

y : Press **[9 wxyz]** three times.

1 : Press **[1 op]** eight times.

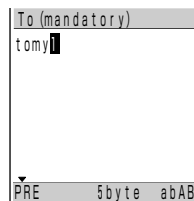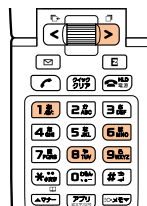


For details on how to input "@ezweb.ne.jp" see page 79.

## To consecutively input characters assigned to the same key


Input the first character, then press **[>]** and press the next character key.

Example: To input "ab"


Press **[2 abc]** once.

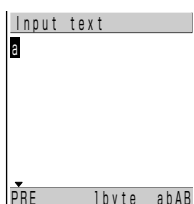

Press **[>]**.

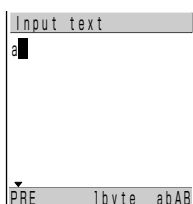

Press **[2 abc]** twice.

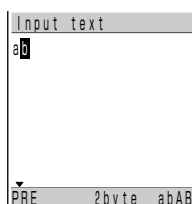

## To input uppercase characters

Example: **[2 abc]** → **[\* \* \* 小文字]** → **[\* \* \* 小文字]**  
a → A → a

## To delete characters

Example: Press **[バック クリア]** once.

abcd**e** → abcd

Hold down **[バック クリア]** for at least one second.

abcd**e** →

(All characters are deleted.)

 


## To input icons

Change the character mode to the E moji mode ( ). For details on how to change the character mode, see page 76.

- 1 Use and / to select the icon you want to use, and press (select).

⇒ The icon you selected appears.





## To input phrases

Change the character mode to the Phrase mode ( Pred). For details on how to change the character mode, see page 76.

Example: To input "@ezweb.ne.jp"



- 1 Turn to select "1 Internet," and press (select).

  ⇒ The phrases selection display appears.

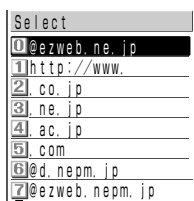





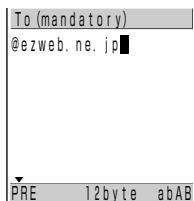




- 2 Turn to select "0 @ezweb.ne.jp" and press (select).

⇒ The selected phrase is inputted.



# Troubleshooting

Symptom	Items to Check
Power does not turn on.	<p>Is the battery pack properly attached?</p> <ul style="list-style-type: none"> <li>Properly attach the battery pack.</li> </ul> <p>Is the battery pack charged?</p> <ul style="list-style-type: none"> <li>Charge the battery pack (page 10).</li> </ul> <p>Did you hold down  for at least one second?</p> <ul style="list-style-type: none"> <li>Hold down  for at least one second (page 11).</li> </ul>
Cannot make calls.	<p>Is "圏外" displayed on the display?</p> <ul style="list-style-type: none"> <li>Make a call from a place where "圏外" is not displayed.</li> </ul> <p>Did you input the area code before inputting the phone number?</p> <ul style="list-style-type: none"> <li>When making a call to a phone other than a cellphone, first input the area code even if you are inside the same city.</li> </ul> <p>Is the power on?</p> <ul style="list-style-type: none"> <li>Hold down  for at least one second (page 11).</li> </ul> <p>Did you press ?</p>
Cannot receive calls.	<p>Is "圏外" displayed on the display?</p> <ul style="list-style-type: none"> <li>Move to a place where "圏外" is not displayed.</li> </ul> <p>Is the power on?</p> <ul style="list-style-type: none"> <li>Hold down  for at least one second (page 11).</li> </ul>
No reaction when a key is pressed.	<p>Is the power on?</p> <ul style="list-style-type: none"> <li>Hold down  for at least one second (page 11).</li> </ul> <p>Is the keypad locked?</p> <ul style="list-style-type: none"> <li>Hold down  for at least one second to unlock the keypad.</li> </ul>
Warning tone sounds, and power turns off.	<p>There is not enough power left in the battery pack.</p> <ul style="list-style-type: none"> <li>Charge the battery pack (page 10).</li> </ul>
Incoming calls are automatically answered.	<p>Is record message set?</p> <ul style="list-style-type: none"> <li>Hold down  for at least one second to cancel record message.</li> </ul>
You cannot hear the other party.	<p>Is the volume during a call set low?</p> <ul style="list-style-type: none"> <li>Turn  up while you are talking. The volume during a call increases.</li> </ul>
You have incoming spam.	<p>Is the mail filter function in use?</p> <ul style="list-style-type: none"> <li>Use the mail filter function (page 48).</li> </ul>
You are connected to a charged service when you call back to a received call.	<p>Have you called an unfamiliar phone number?</p> <ul style="list-style-type: none"> <li>Be careful when you call back to a number you do not recognize (page 21).</li> </ul>

# Other features

The A1402S has other handy features in addition to those introduced in this Basic Manual.

## Menu design settings

You can select a pattern for the menu display. You can also set the pattern data you downloaded.

## Idle display settings

You can set a photo taken by the A1402S or other image as the idle display. You can also select your favorite image for the idle display of the quick display.

## Incoming indicator settings

You can make and set the color and flashing pattern of an incoming indicator when you have an incoming call or mail.

## EZ "着うた™"

This service allows you to set an artist's song as an incoming ring.

## PhotoMixer

You can create your own original works by adding images or text to pre-set, melody-attached animation templates.

## EZ application (BREW™)

You can download game software from EZweb (Internet) sites and play games. 2D CODE READER and Infrared Remote Controls, for example, are also available.

# Index

## A

**accessories** ..... 8

## B

**battery pack** ..... 8, 9, 10

**battery power, remaining** ..... 4, 11

**before use** ..... 8

## C

### call

if you could not answer ..... 19

making ..... 18

notify/not notify the other party ..... 18

receiving ..... 19

**camera** ..... 54

how to hold ..... 55

movie ..... 58

photo ..... 56

**cellphone etiquette** ..... 1

**center jog** ..... 9, 12

**charge indicator** ..... 9, 10

**charging the battery pack** ..... 10

**C-mail** ..... 49

creating and sending ..... 50

icon ..... 53

opening ..... 52

receiving ..... 52

**confirming your call costs** ..... 69

**confirming your cellphone number** ..... 17

## D

**desktop holder** ..... 8, 10

**Dialed display** ..... 13, 20

**domain** ..... 37

**downloading incoming melody** ..... 70

## E

**e-mail** ..... 34

attaching photo or movie ..... 62

creating and sending ..... 38

icons ..... 41, 43

initial settings ..... 16

opening ..... 41

receiving ..... 41

replying ..... 44

viewing attached photo or movie ..... 47

**e-mail address** ..... 17, 35

inputting ..... 38, 77

**EZ Top menu** ..... 65, 66

**EZweb** ..... 64

charged service usage information ..... 69

confirming your call costs ..... 69

EZ password ..... 69

Favorite list ..... 68

information sites ..... 65

initial settings ..... 16

## F

### Favorite list

saving ..... 67

viewing ..... 68

## I

**icons** ..... 15

**idle display** ..... 11, 15

**incoming indicator** ..... 9, 19

### incoming ring

tone ..... 22

volume ..... 22

**Index menu** ..... 13

**infrared data exchange feature** ..... 72

receiving ..... 75

sending ..... 74

**initial settings** ..... 16

**inputting text** ..... 76

alphanumerics ..... 77

changing character mode ..... 76

character key assignment table ..... 77

characters assigned to the same key ... 78

deleting characters .....	78
icons .....	79
phrases .....	79
uppercase .....	78

## Internet (See "EZweb")

## K

<b>key operation</b> .....	12
keypad lock .....	3

## M

<b>mail</b>	
C-mail .....	49
e-mail .....	34
<b>mail filter</b> .....	48
<b>manner mode</b> .....	3, 25
<b>movie</b>	
attaching to e-mail .....	62
recording .....	58
saving .....	59
viewing .....	61

## N

<b>names of parts</b> .....	9
-----------------------------	---

## O

<b>one-ring call</b> .....	5, 21
icon .....	21

## P

<b>phone book</b> .....	28
editing saved data .....	30
making a call from .....	32
saving new data .....	28
saving received call .....	33

## photo

attaching to e-mail .....	62
saving .....	57
taking .....	56

viewing .....	60
---------------	----

## Photo-mail ..... 63

## playing back

movie .....	61
photo .....	60
record message .....	27

## power ..... 4, 11

## Q

## quick display ..... 9, 15

## R

## Received display ..... 13, 20

icons .....	20
-------------	----

## reception ..... 4, 11

## record message ..... 3, 26

playing back .....	27
--------------------	----

## redialing

number you called .....	20
number you received .....	20

## S

## sites ..... 65

## soft key ..... 12

## spam ..... 5, 48

## T

## troubleshooting ..... 80

## U

## User unset ..... 19

## V

## volume during a call ..... 24

## Y

## your e-mail address

changing .....	35
confirming .....	17

## For inquiries, call:

au Customer Service Center (General Information)

From regular phones:



**0077-7-111**

(toll free)

From au cellphones:

**157 area code not required**

(toll free)

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.



古紙配合率100%再生紙を使用しています



モバイル・リサイクル・ネットワーク  
携帯電話・PHSのリサイクルにご協力を。

Cellphone and PHS operators collect and recycle unused telephones, batteries and battery chargers at stores bearing the ♻️ logo regardless of brand and manufacturer to protect the environment and reuse valuable resources.

Sales : KDDI Corporation

Okinawa Cellular Telephone Company

Manufacturer : Sony Ericsson Mobile Communications Japan, Inc.

A-BWH-100-11 (1)

March 2004, 1st Edition